



## One Wide Locker Assembly


**Step 1:** Attach the top shelf and bottom shelf to the back panel.

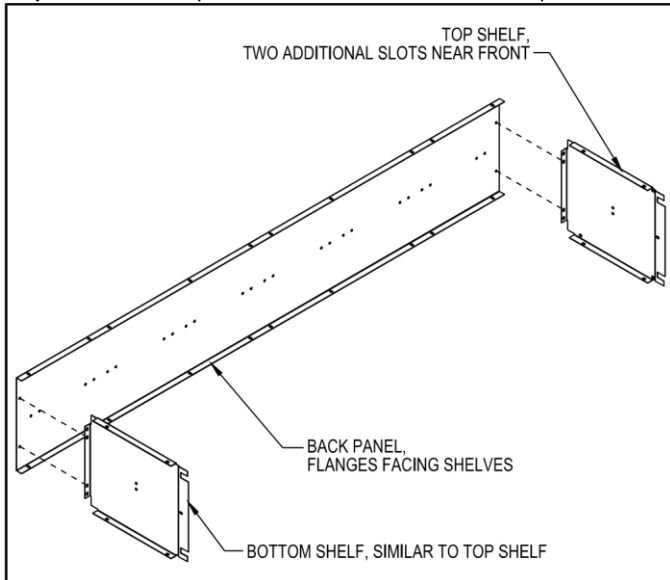


**Step 2:** Turn the back panel onto its back with the shelves pointing upward. Attach the first side panel, the left rear leg, and five compartment dividers to the assembly from Step 1.

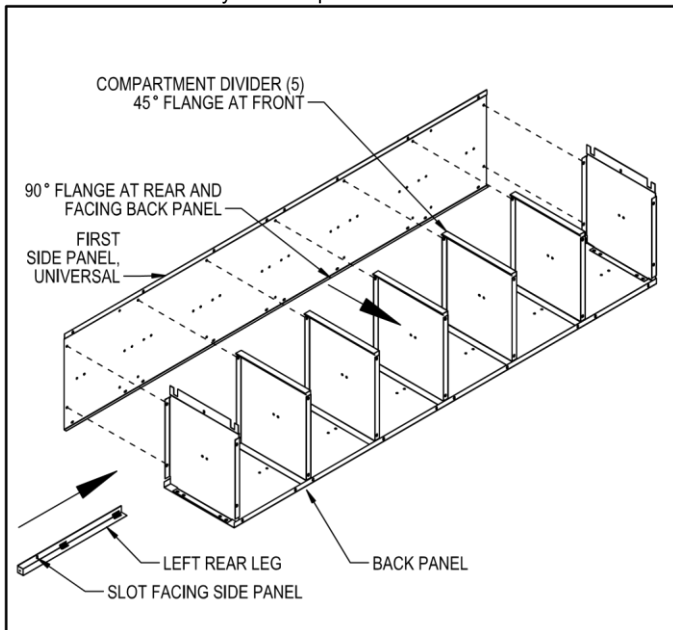

**Step 3:** Attach the second side panel and the right rear leg to the assembly from Step 2. The locker chassis is now complete.

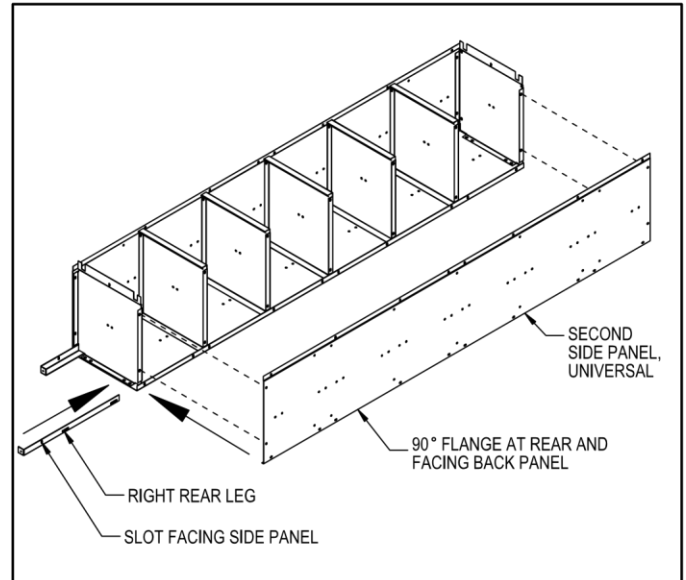

**Step 4:** Attach the pre-assembled door frame onto the assembly from Step 3.

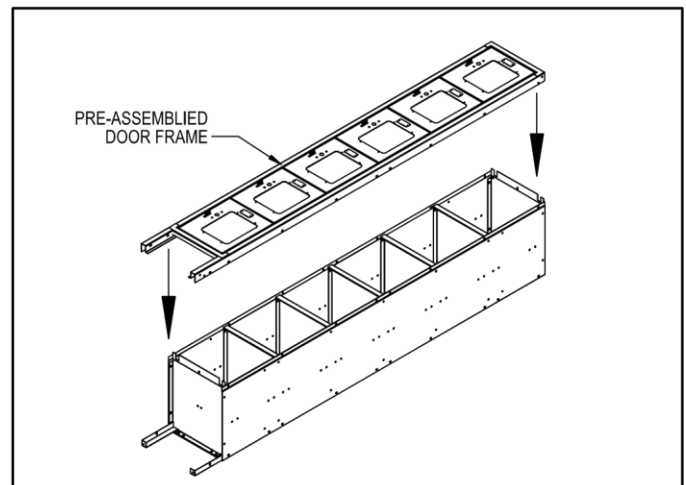

**Step 5:** Tighten all fasteners, ensuring the locker remains square during the process. If desired, attach optional sloping hood, end bases, or front base (see pages 4 and 5).


**Step 6:** Place the locker in the installation location and anchor to the floor, wall, or both. Individual job conditions will dictate the type of fastening anchors to use (not provided).

**Step 7:** Fasten all lockers in a row together by installing fasteners provided through the side panels. Installation is now complete.


## Three Wide Locker Assembly

**Step 1:** Attach a top shelf and a bottom shelf to a back panel.

# 12" Wide See-Through Lockers – S-65000 / S-66000 Box Style Installation Instructions

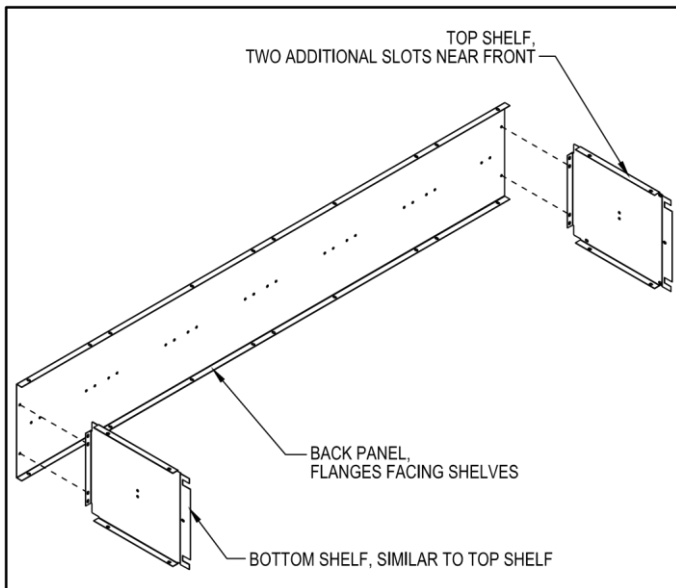


**Step 2:** Turn the back panel onto its back with the shelves pointing upward. Attach the first side panel, the left rear leg, and five compartment dividers to the assembly from Step 1.

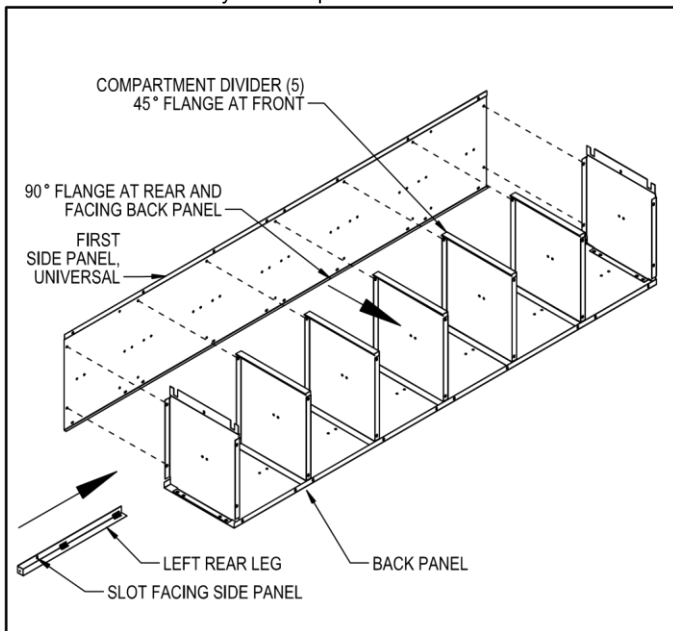


**Step 3:** Attach a second top shelf and a second bottom shelf to a second back panel (as in Step 1).

**Step 4:** Simultaneously attach the assembly from Step 3, a second side panel, and five additional compartment dividers to the assembly from Step 2.

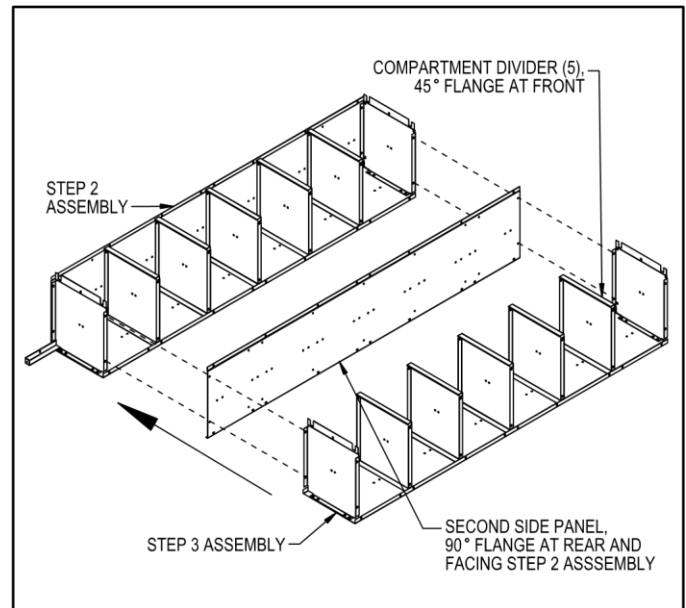

**Step 5:** Attach a third top shelf and a third bottom shelf to a third back panel (as in Steps 1 and 3).


**Step 6:** Simultaneously attach the assembly from Step 5, a third side panel, and five additional compartment dividers to the assembly from Step 4.

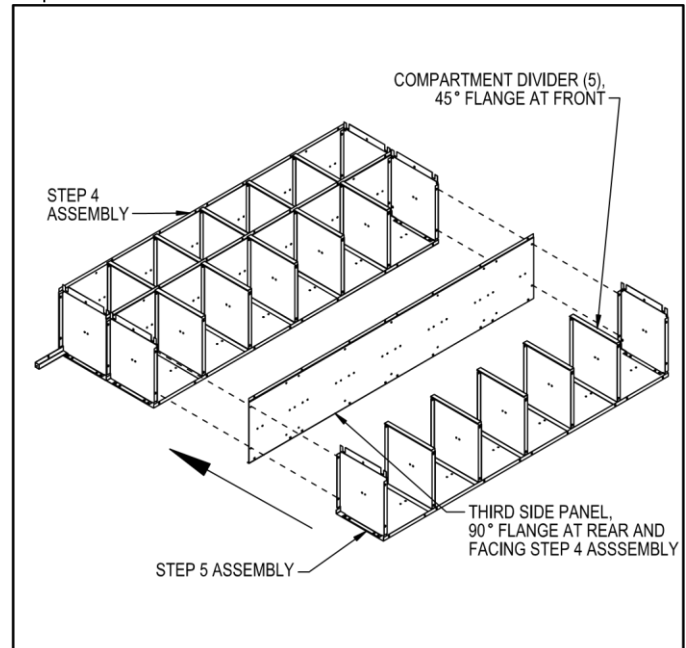


## Three Wide Locker Assembly (continued)

**Step 7:** Attach the last side panel and the right rear leg to the assembly from Step 6. The locker chassis is now complete.

# 12" Wide See-Through Lockers – S-65000 / S-66000 Box Style Installation Instructions

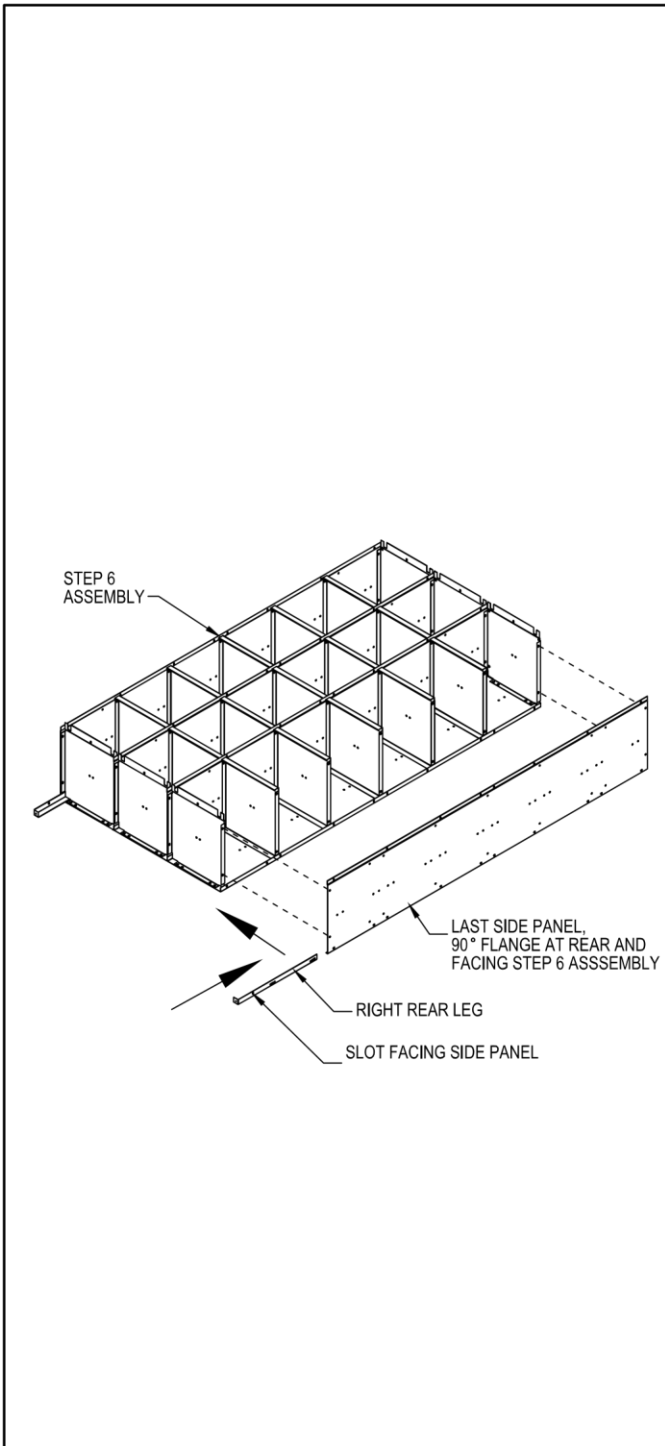

**Step 8:** Attach the pre-assembled door frames to the completed locker chassis from Step 7.

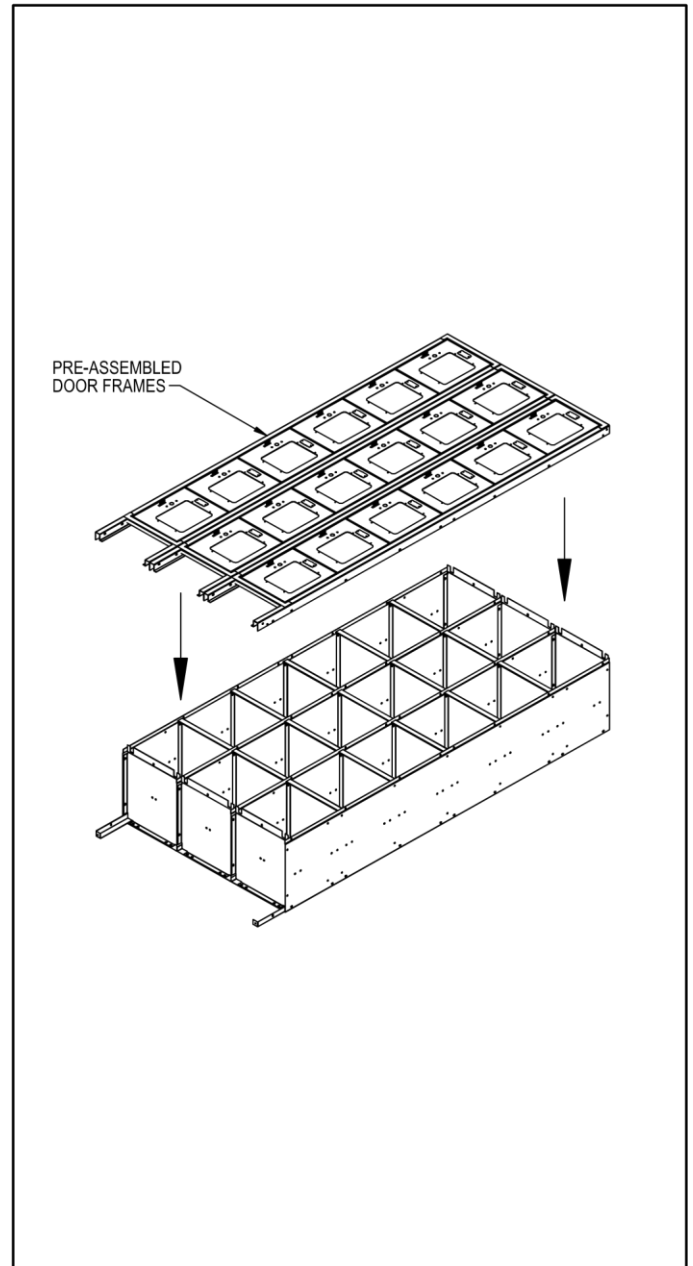

**Step 9:** Tighten all fasteners, ensuring the locker remains square during the process. If desired, attach optional sloping hood, end bases, or front base (see pages 4 and 5).

**Step 10:** Place the locker in the installation location and anchor to the floor, wall, or both.


Individual job conditions will dictate the type of fastening anchors to use (not provided).

**Step 11:** Fasten all lockers in a row together by installing fasteners through the side panels. Installation is now complete.


# 12" Wide See-Through Lockers – S-65000 / S-66000 Box Style Installation Instructions

## Sloping Hood Installation (Optional)

**Step 1:** Attach the top panel to the rear panel using #10-24 x 3/8" slotless screws and #10 nuts (provided). Position the flange of the top panel behind the rear panel.

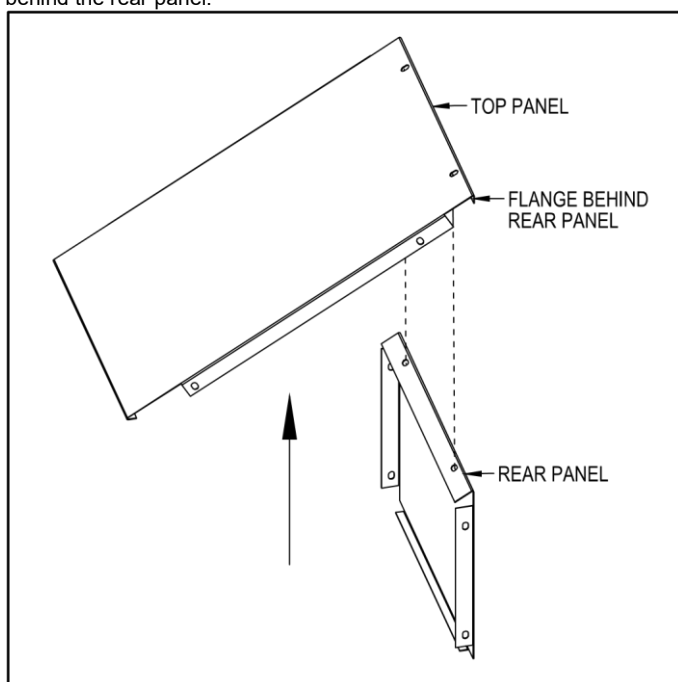

**Step 2:** Attach the side panels to the top panel and rear panel. Sloping hood assembly is now complete.

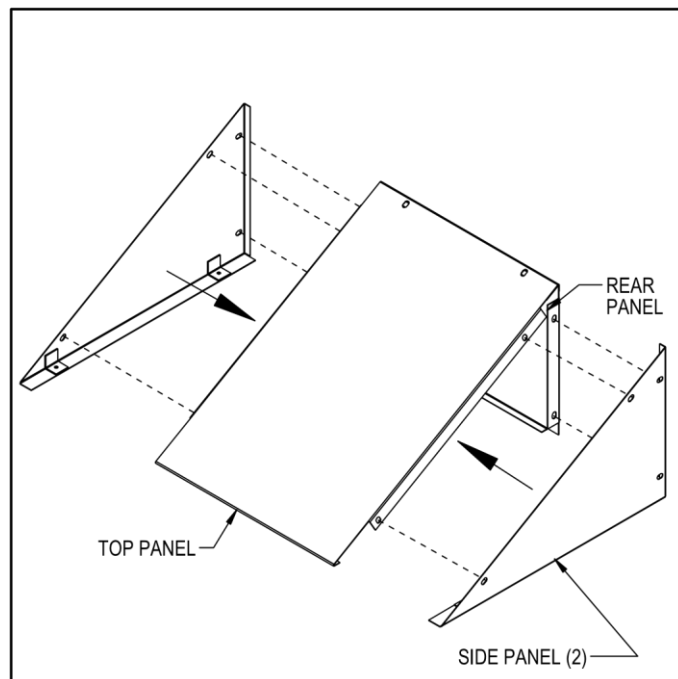


**Step 3:** Attach the sloping hood to the top of the locker with slotted #8 - 32 screws (provided).

# 12" Wide See-Through Lockers – S-65000 / S-66000 Box Style Installation Instructions

## Front Base Installation (Optional)


Position the front base between the front legs of the locker with the flange upward. Attach to the locker legs with #10-24 x 3/8" slotless screws and #10 nuts (provided).

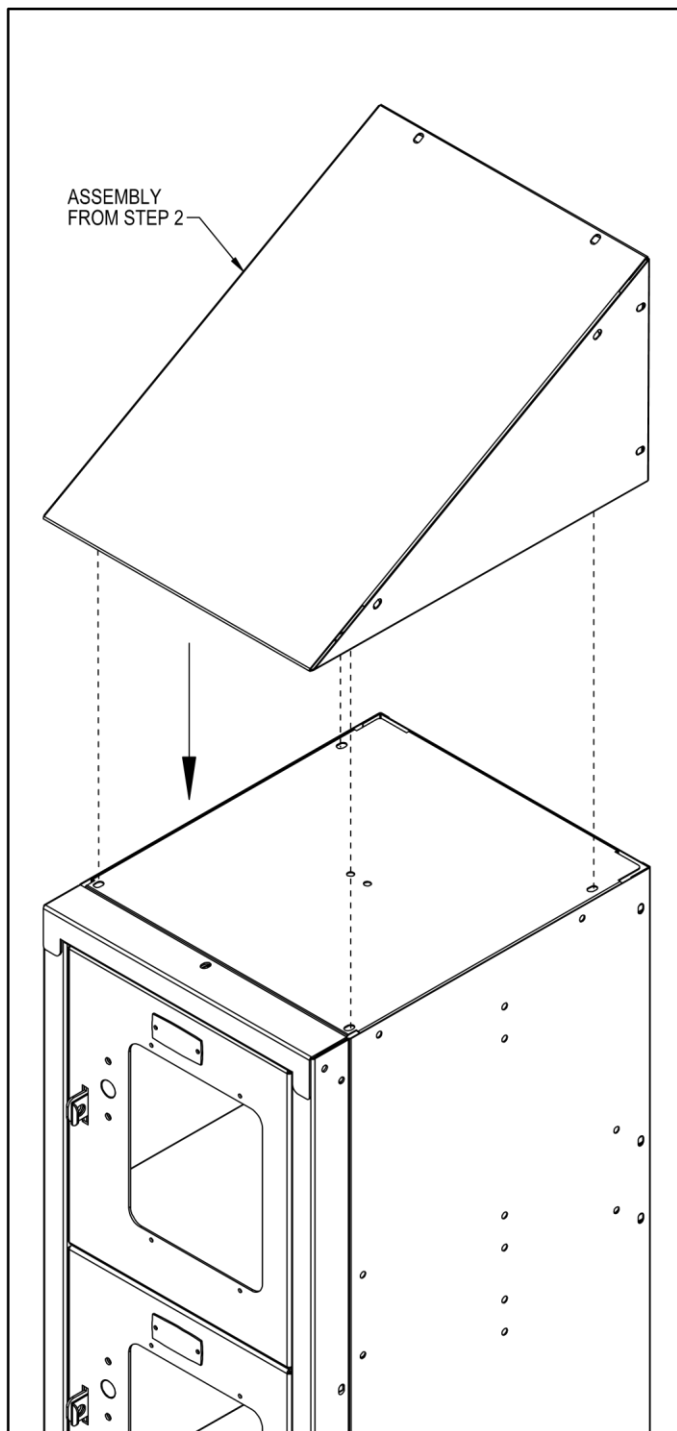

# 12" Wide See-Through Lockers – S-65000 / S-66000 Box Style Installation Instructions

## End Base Installation (Optional)

Position the appropriate end base (right or left) behind the corresponding side legs (right or left) of the locker with the flange upward. Attach to the locker legs with #10-24 x 3/8" slotless screws and #10 nuts (provided). Repeat for the opposite side.

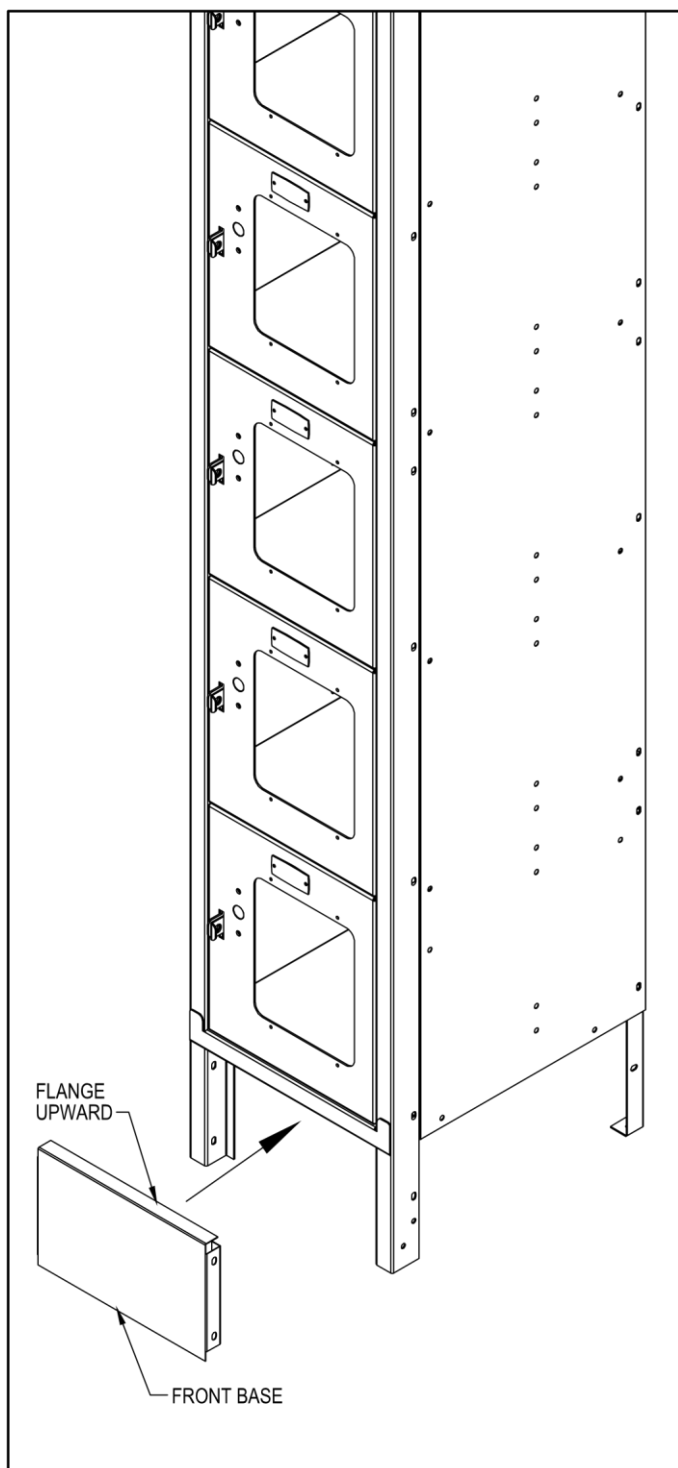

# 12" Wide See-Through Lockers – S-65000 / S-66000 Box Style Installation Instructions

